

# Weather Stripping


## Installation Instructions

Weather stripping helps you properly seal your doors. To apply correctly, follow the steps listed below.

### What you will need:



Scissors

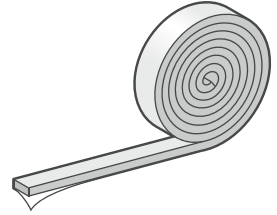

**Step 1:** Make sure old weather stripping was removed and surface is clean and dry.

**Step 2:** Peel protective backing from starting end of roll.


**Step 3:** Locate and press end of tape in place.

**Step 4:** Working the length of tape, press in place as you continue to remove protective backing.

**Step 5:** As you approach desired length, cut to fit before removing all the protective backing.

**Step 6:** Repeat steps 1 through 5 for the top and both sides of the door jamb.

**Step 7:** Make sure door opens and closes properly.

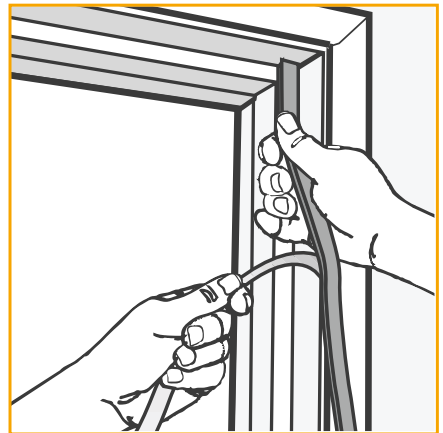


A Natural Choice.

► Find more ways to save at  
[nmgcgetrebates.com](http://nmgcgetrebates.com)

# Door Sweep

## Installation Instructions

To apply correctly, follow the steps listed below.

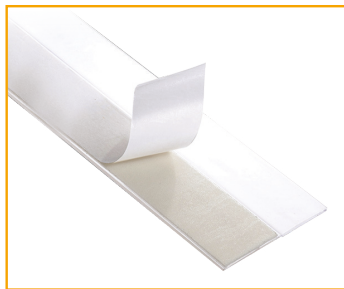

### What you will need:

Pencil | Scissors | Tape Measure



**Step 1:** Measure the width of your door and cut the door sweep to size.

**Step 2:** Place the door sweep (with peel-off strip still attached) to the back of your closed door, making sure the seal touches the threshold of the door.

**Step 3:** Using a pencil, mark the location of the door sweep on the bottom of your door.

**Step 4:** Peel off the adhesive strip and press the door sweep into place using the marks as a guide.

**Step 5:** Make sure door opens and closes properly.

*New Mexico Gas Company, ICF, and TechniArt are not responsible for damages caused by the installation of the contents of the kit.*



New Mexico  
GAS COMPANY®  
AN EMERA COMPANY

A Natural Choice.

► Find more ways to save at  
[nmgcgetrebates.com](http://nmgcgetrebates.com)