

Weather Stripping


Installation Instructions

Weather stripping helps you properly seal your doors. To apply correctly, follow the steps listed below.

What you will need:



Scissors

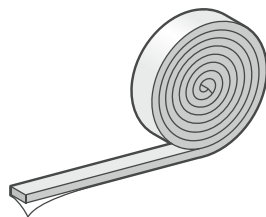

Step 1: Make sure old weather stripping was removed and surface is clean and dry.

Step 2: Peel protective backing from starting end of roll.


Step 3: Locate and press end of tape in place.

Step 4: Working the length of tape, press in place as you continue to remove protective backing.

Step 5: As you approach desired length, cut to fit before removing all the protective backing.

Step 6: Repeat steps 1 through 5 for the top and both sides of the door jam.

Step 7: Make sure door opens and closes properly.

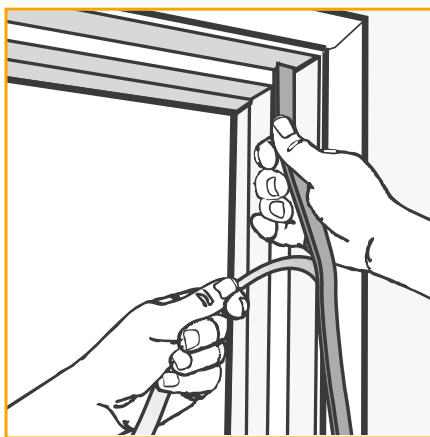

New Mexico
GAS COMPANY®
AN EMERA COMPANY


A Natural Choice.

► Find more ways to save at
nmgcgetrebates.com

Door Sweep

Installation Instructions

To apply correctly, follow the steps listed below.

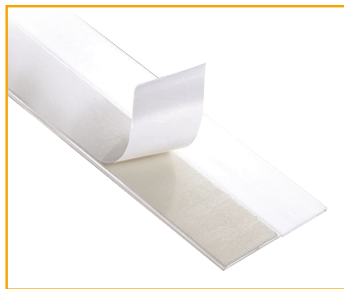

What you will need:

Pencil | Scissors | Tape Measure



Step 1: Measure the width of your door and cut the door sweep to size.

Step 2: Place the door sweep (with peel-off strip still attached) to the back of your closed door, making sure the seal touches the threshold of the door.

Step 3: Using a pencil, mark the location of the door sweep on the bottom of your door.

Step 4: Peel off the adhesive strip and press the door sweep into place using the marks as a guide.

Step 5: Make sure door opens and closes properly.

New Mexico Gas Company, ICF, and TechniArt are not responsible for damages caused by the installation of the contents of the kit.



New Mexico
GAS COMPANY®
AN EMERA COMPANY

A Natural Choice.

► Find more ways to save at
nmgcgetrebates.com